

Forcing Garmin GPSMAP 76 GPS receivers to use Daylight Savings Time (DST) for waypoint attributes and display:

1. Power on the receiver. Press the PAGE button until the Satellite Status screen appears [see illustration, right]. If prompted with a menu titled “Poor Satellite Reception”, select “Start Simulator” using the center toggle button if necessary and press the ENTER button.
2. Open the receiver’s Main Menu by pressing the MENU button twice. Using the center toggle button, scroll down the menu until “Setup” is selected, and press the ENTER button. Use the center toggle button to move the tab selection until the “Time” tab is selected.
3. Using the center toggle button, scroll down to the “Daylight Savings Time” option, and press the ENTER button. Choose the option “Yes” using the center toggle button [see illustration, right], and press the ENTER button to confirm your choice. The “Time Format” option may be set to either 12 or 24 Hour, and the “Time Zone” option should be set as appropriate for your location. It is not necessary to change the “Time Zone” option if your work takes you into a time zone other than the one indicated.
4. Return the receiver to normal operation by pressing the QUIT button twice.



At the end of DST, it will be necessary to repeat these instructions, substituting either “No” or “Auto” for “Yes” in step 3.